





**How to Use Templates
for
Epson F2000 & F2100**

Step 1

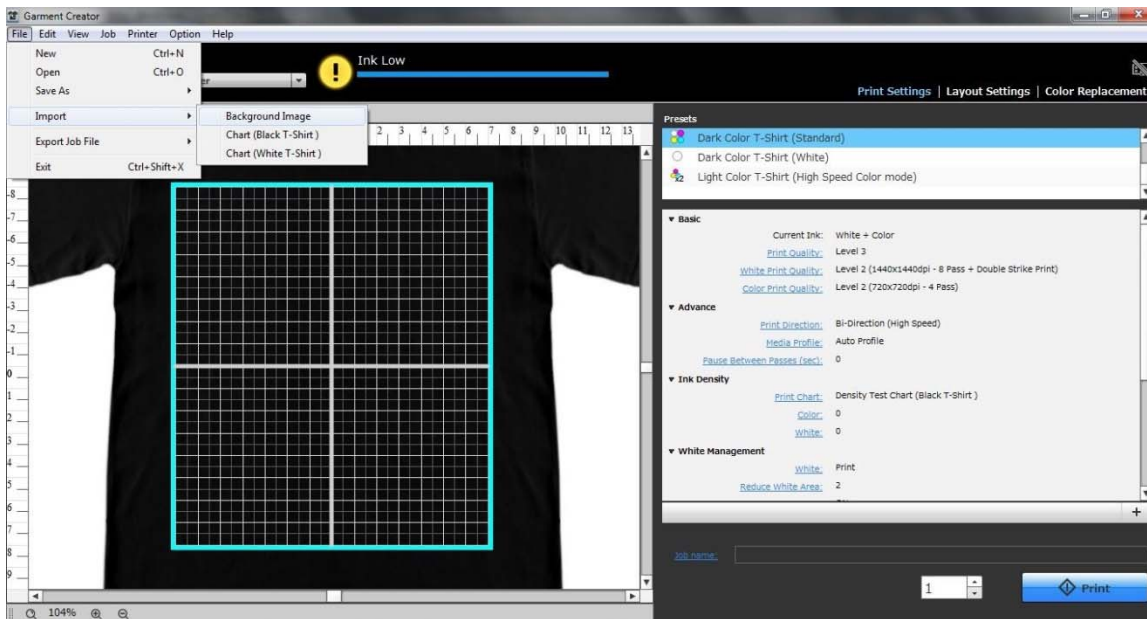


Select File >Import>Background Image

Step 2

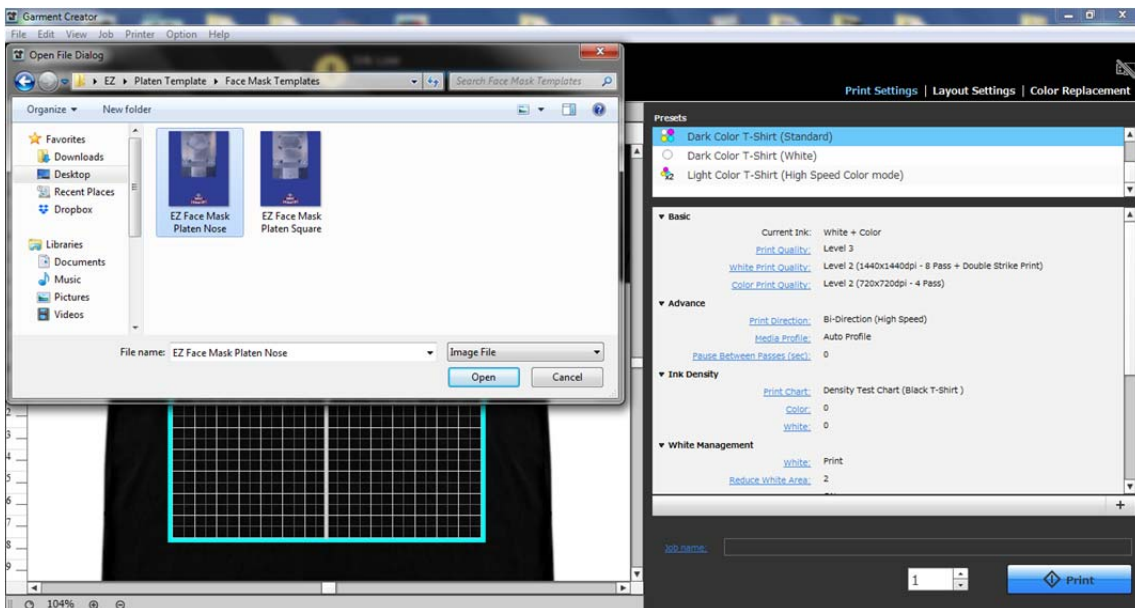

Select the correct Template, then select open.


Step 3

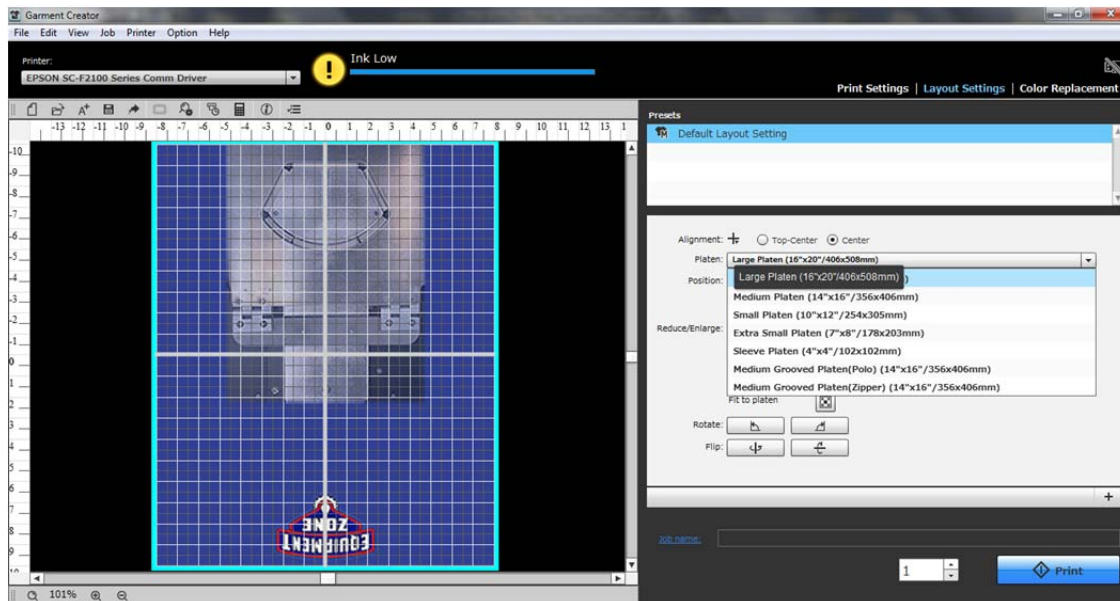

Select Layout Settings.


Under 'Platen' select the 16x20 large platen for most templates. (You will see the template fit to platen size)

Step 4

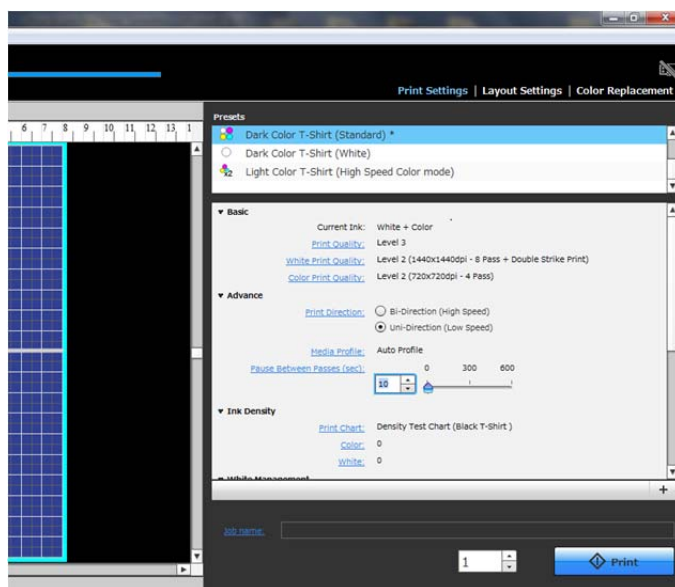

Set your print settings as follows before printing, Set to Uni-Direction. Also set a desired pause time if you would like.

Step 5

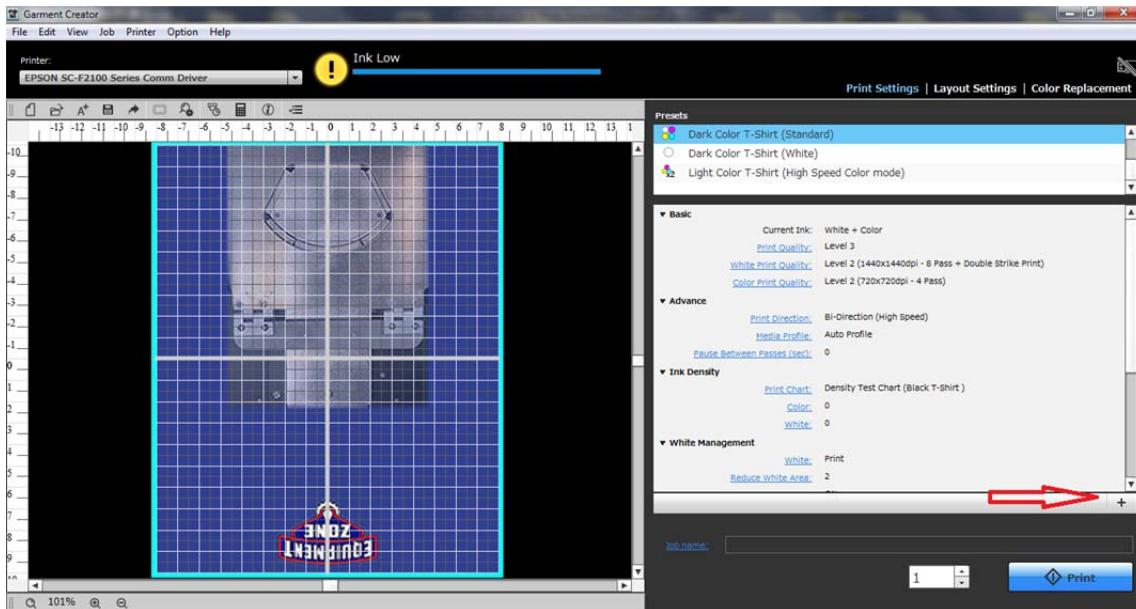

Your grid will now show the template

NOTE: The template will revert if you change your preset. Please hit the + sign to save preset in each of the print settings.

Black Color T-Shirt (Use Garment Black), Light Color T-Shirt (Standard), Dark Color T-Shirt (Standard). **Must use new name Like / Black Color Template Name (Use Garment Black).**