





Tube Washing Upgrade Guide for Epson SureColor F2000

Part 1 -How to Upgrade Epson F2000 Firmware

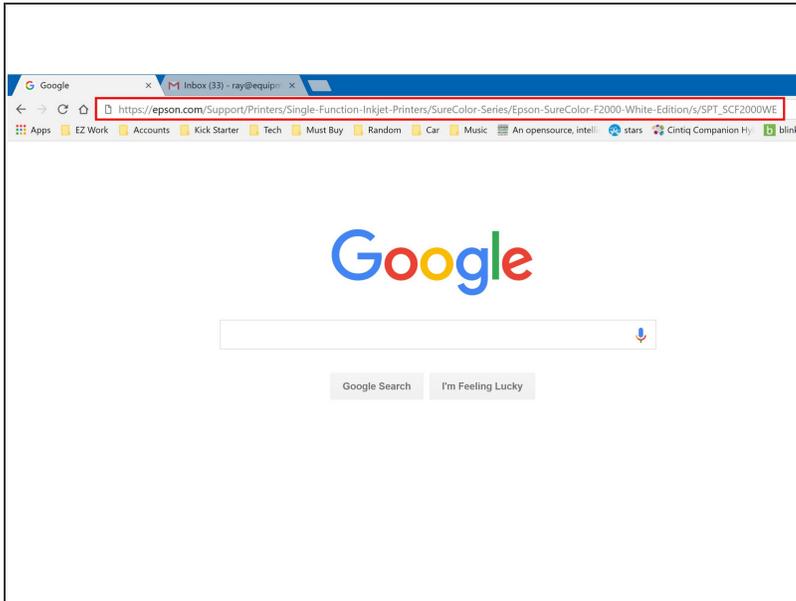


- Open your internet browser
- Select address bar located up top and type this web address.
https://epson.com/Support/Printers/Single-Function-Inkjet-Printers/SureColor-Series/Epson-SureColor-F2000-White-Edition/s/SPT_SCF2000WE

Step 2

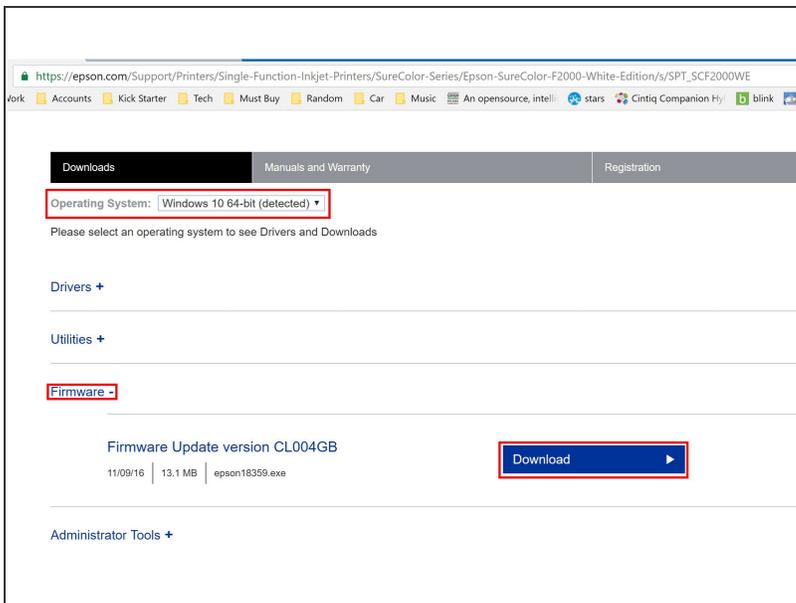


- Choose your Windows Operating System if it is not automatically selected
- Open the 'Firmware' tab and choose download.

Step 3

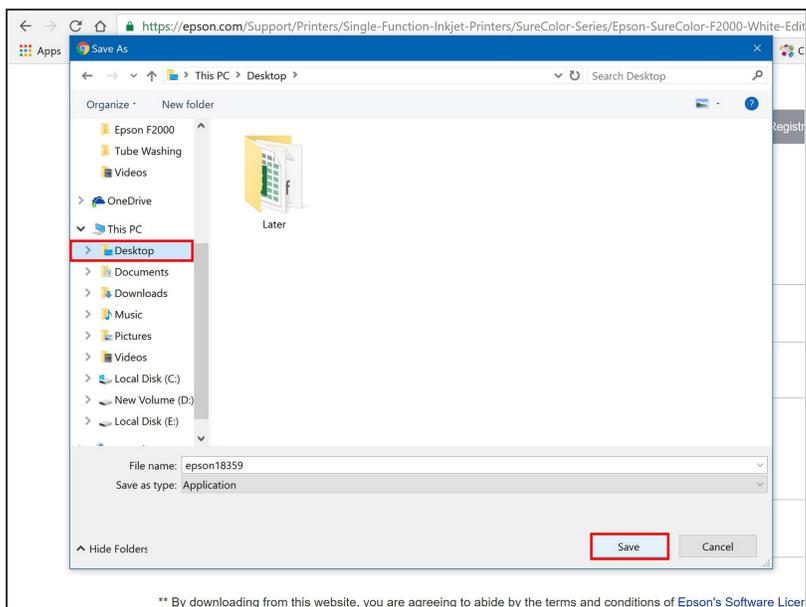


- Select your desktop as your download location.
- Note: If you do not choose location, the file will be found in the download folder

Step 4

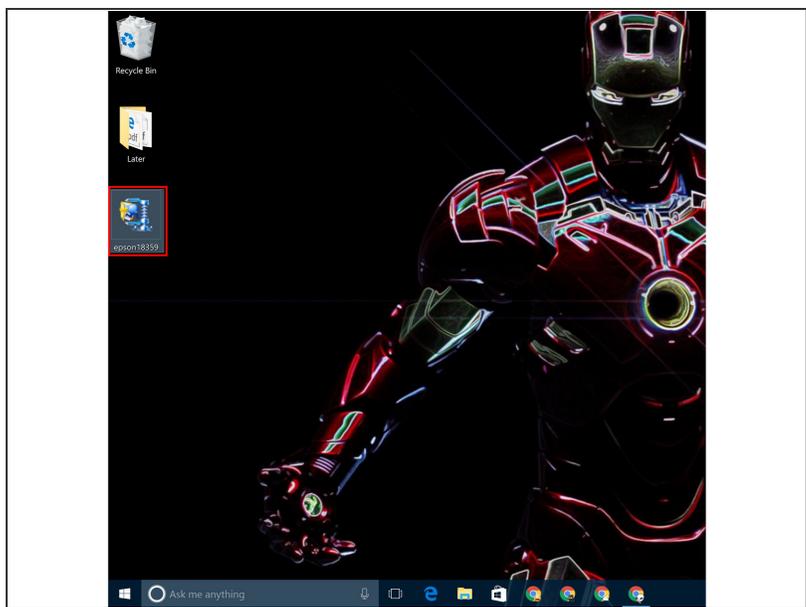


- Locate the Epson zip file on your desktop or download folder.
- Open the zip file

Step 5

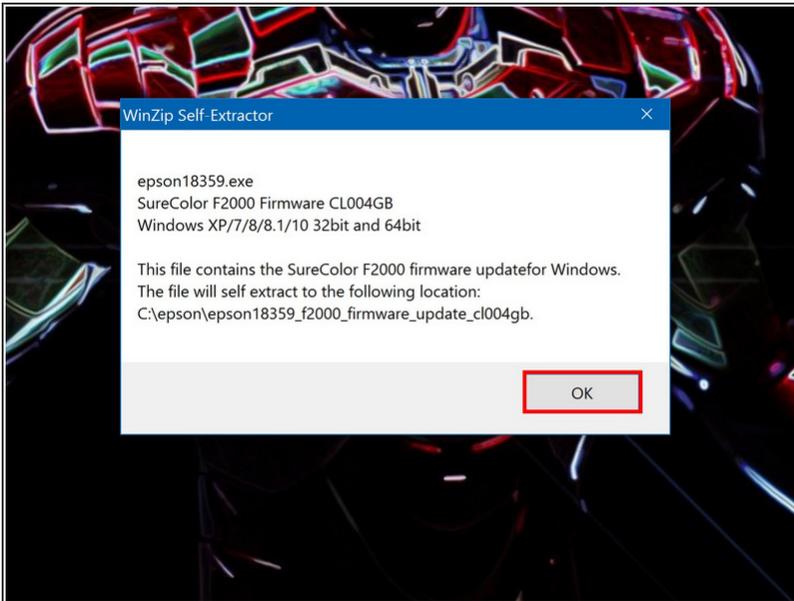


- Select 'OK' to continue the extraction

Step 6

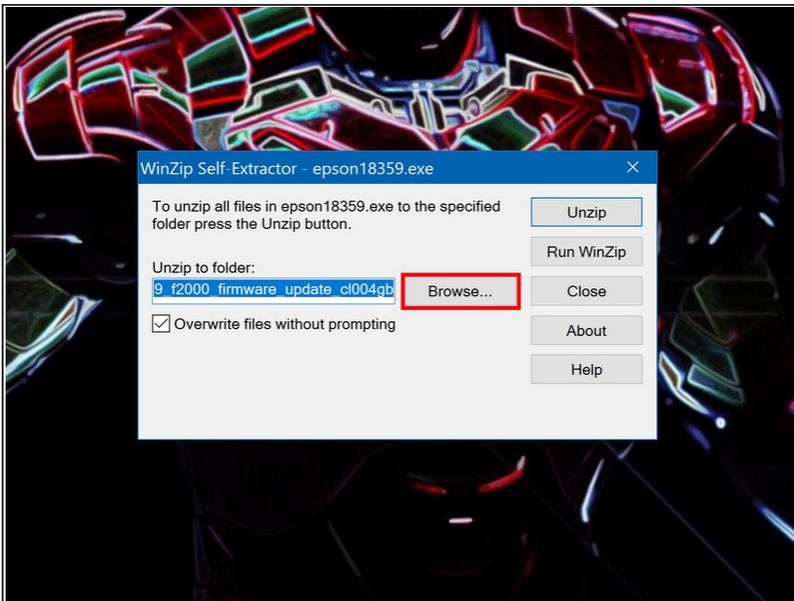


- Select the 'Browse' button

Step 7

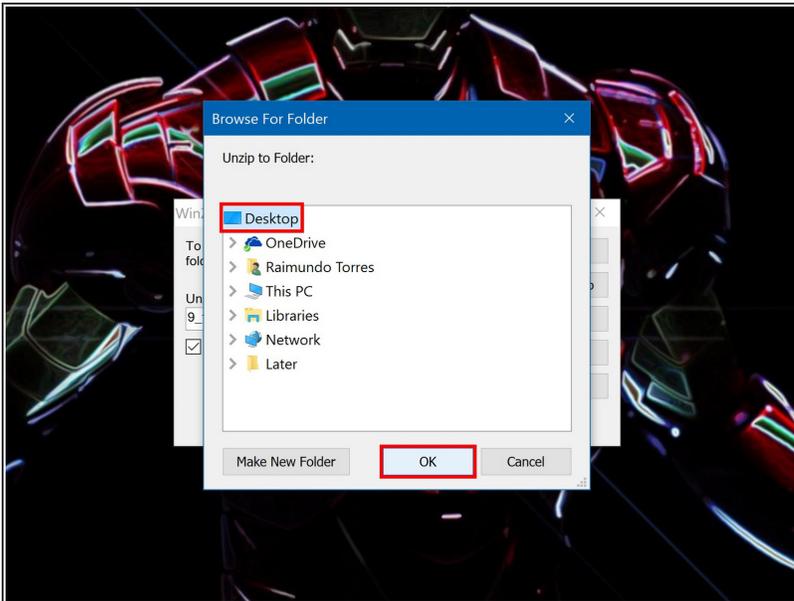


- Choose 'Desktop' as your unzip location and select 'OK'

Step 8

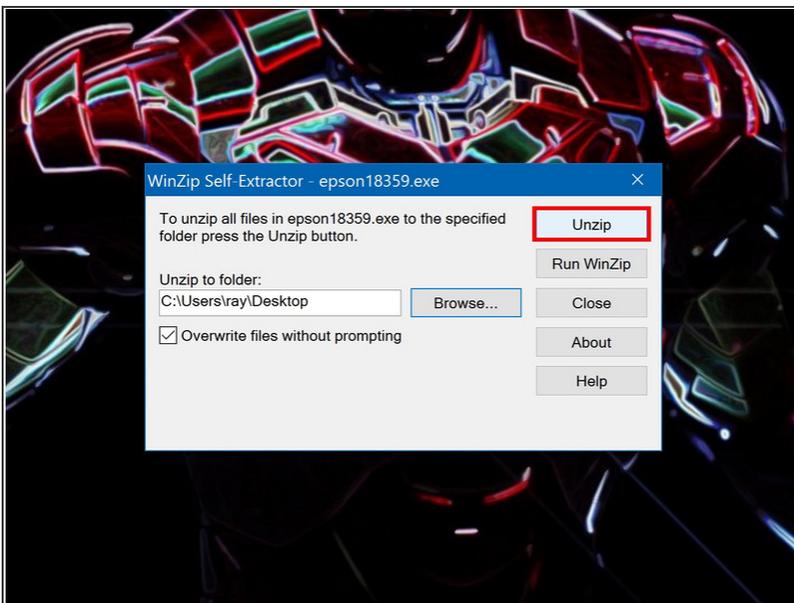


- Select the 'Unzip' button

Step 9

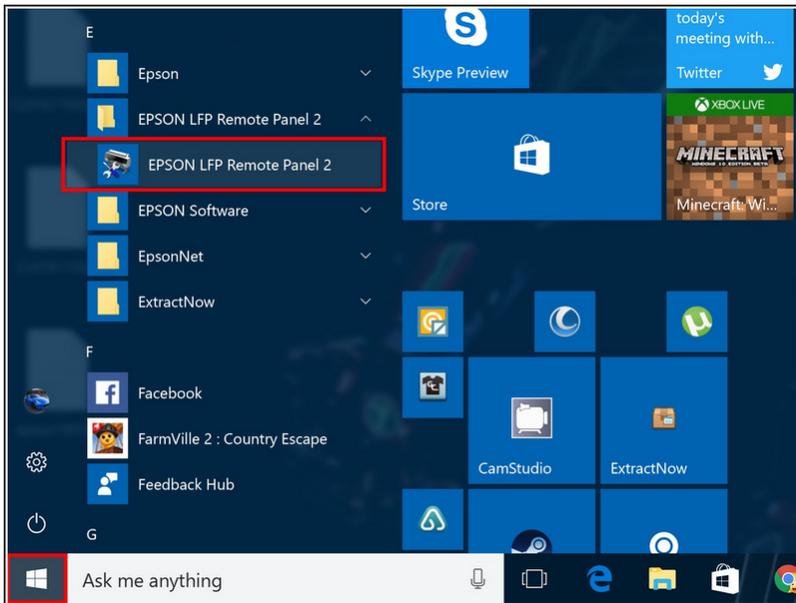


- On your Windows PC open the 'Start Menu' Located at the bottom left of the screen.
- Scroll through your applications and locate the 'Epson LFP Remote Panel 2'
- Open the program

Step 10

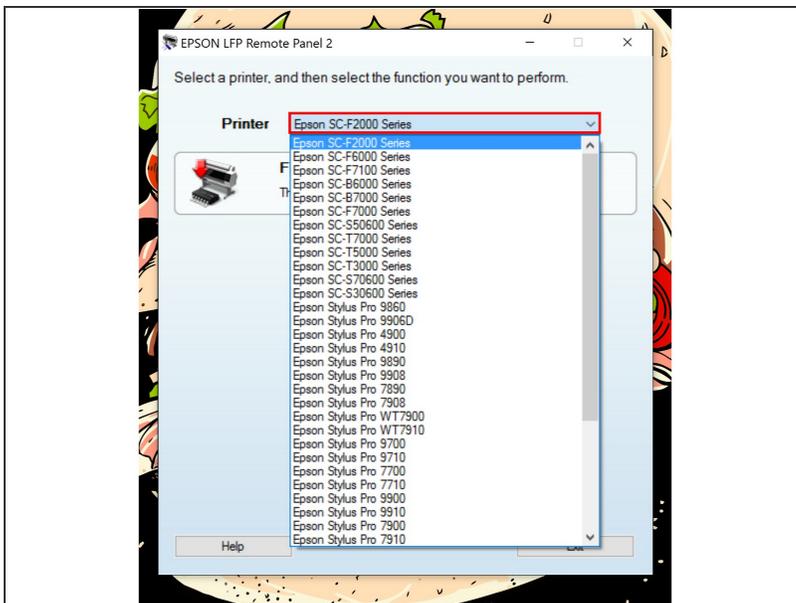


- In drop down select ' Epson SC-F2000 Series.

Step 11

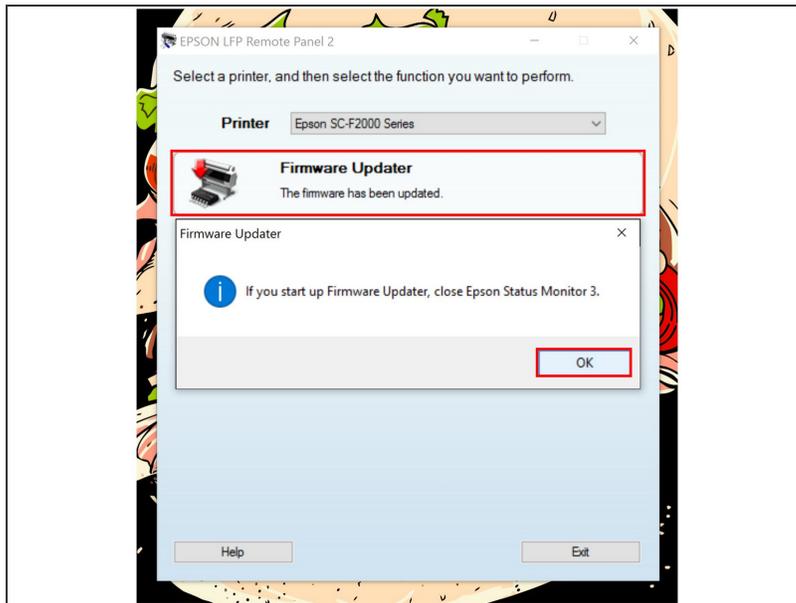


- Select 'Firmware Updater'
- Firmware Updater will ask you to close Epson Monitor 3. Select 'OK'

Step 12

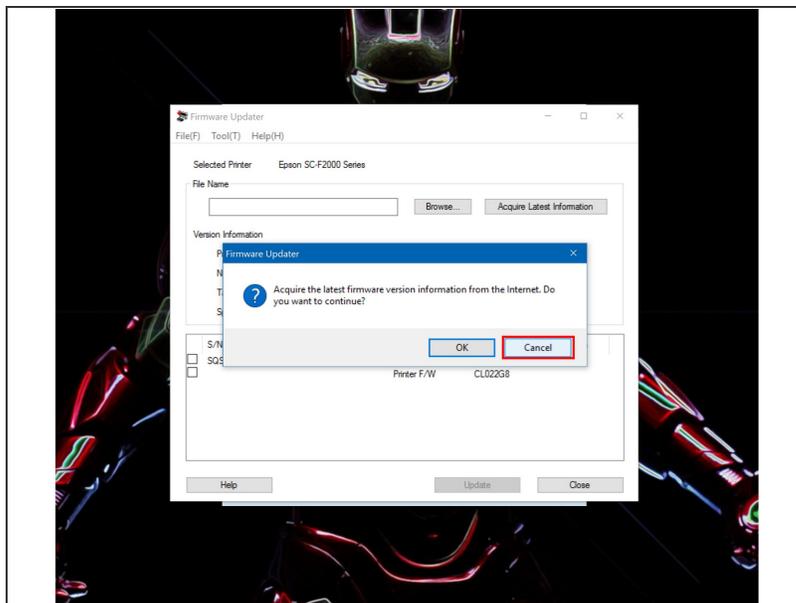


- An option will appear asking if you would like to update via internet. Select 'Cancel'
- Once you cancel the internet update, select the 'Browse' button

Step 13

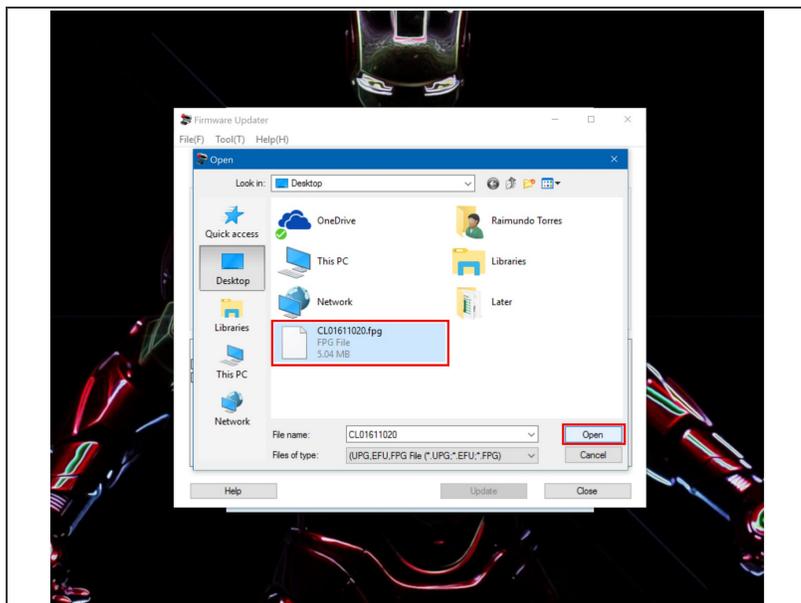


- Find your firmware update file, located on your desktop and select 'Open'

Step 14

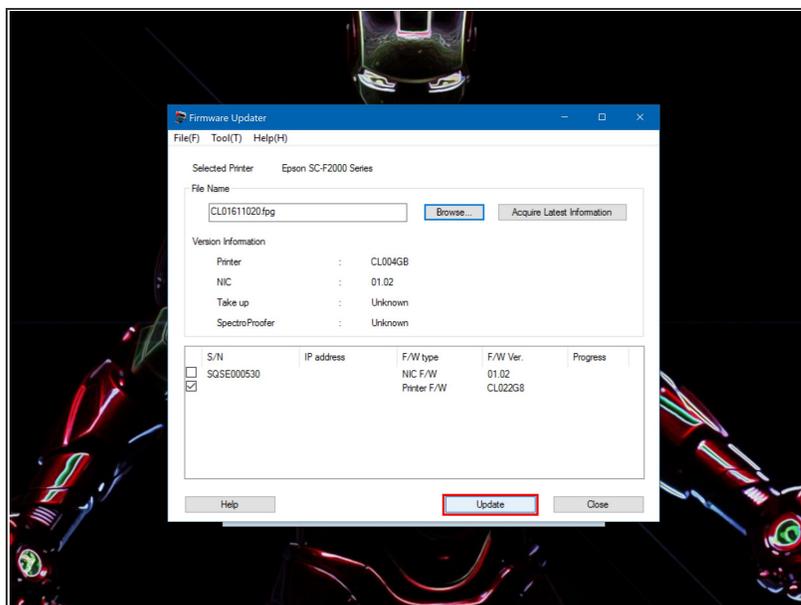

- Select Update located at the bottom.
- Your printer will advise you when the update is complete

Step 15

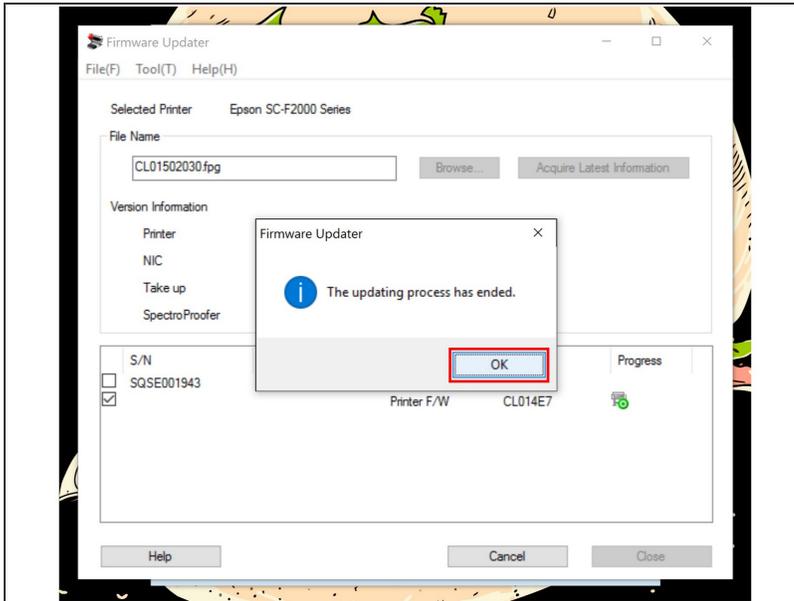

- After a minute or two a message will come up, letting you know your update is complete.
- Select 'OK' and close the Firmware Updater

Step 16



- Push the Menu button
- Scroll down and select 'Printer Setup'
- Push the Menu button

Step 17




- Scroll down to 'Tube Washing Setup'
- Push the Menu button

Step 18



- Select 'Eco' and push 'OK'

Step 19

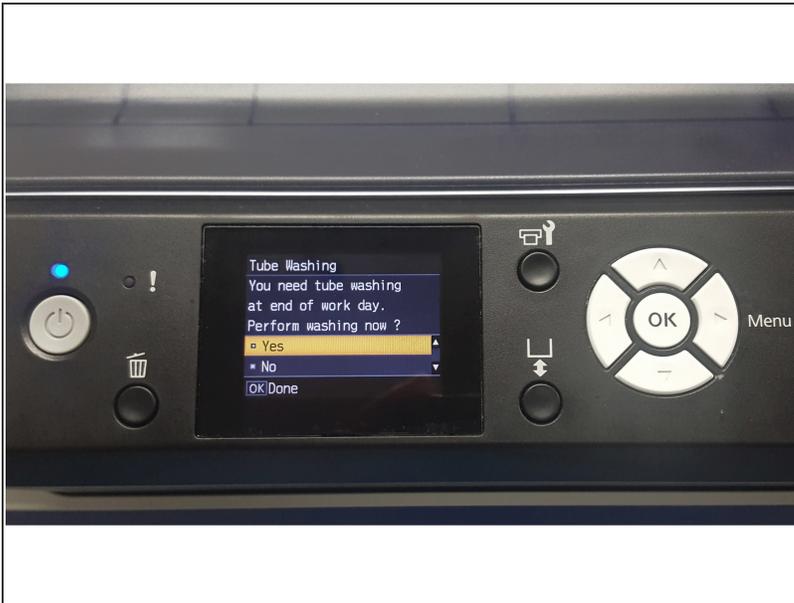

- A message will appear telling you the a tube washing is needed at the end of your day.
- The message will also ask if you want to perform a cleaning now
- If this is your end of day, select 'Yes' and push 'OK'. Part 2 of this guide will explain the maintenance process.
- If you answer is no, select 'NO' and push 'OK'. You will be prompted to do your cleaning when you power down. Part 2 of this guide will explain the maintenance process.

Part 2 - End of day Tube Wash



- Open your tube washing kit and locate the Flushing Fluid, Eye Dropper and the Measuring Cup

Step 21



- Fill the measuring cup up to the 10ml mark

Step 22



- Suck as much of the Flushing Fluid as possible into the Eye Dropper.

Step 23



- Push the power button and you will be prompted to perform a 'tube washing'
- Select 'Yes' and push the 'OK' button

Step 24



- Open the cover when the screen prompts you to.

Step 25



- Place your eye dropper in the Head Cap unit
- Push the down arrow key located on the control panel.
- Gently squeeze the flushing fluid into the head cap unit as it starts pumping.
- Repeat these steps until cleaning fluid is gone from measuring cup.
- Last wipe head cap edges and close top. Push 'OK' button to confirm you finished and the machine will shut down.